

The Helios Range

HeliosMini - Strange Readings


PROBLEM strange readings

If the RH/T module becomes unplugged / disconnected, you get the following readings:

- a) when you offload the data, RH reads zero, temperature reads 102.375
- b) when you view 'live' readings in the Helios software, RH reads 0100.0 and temperature reads 38.37

SOLUTION

- a) Carefully open the logger lid to reveal the battery and electronics if there is a leaf wetness sensor attached to the lid, take extra care as the lid will be connected by 2 wires inside.
- b) In the very centre of the electronics is a white plastic connector this is where the RH / temperature module is attached. Check the connector is firmly in place.

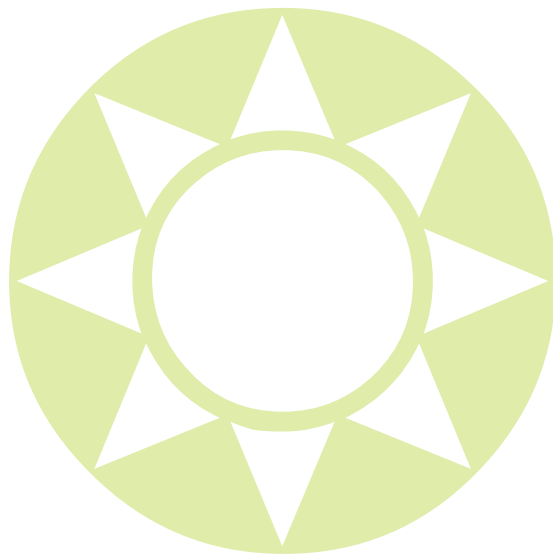

SKYE INSTRUMENTS LTD
21, Ddole Enterprise Park, Llandrindod Wells, Powys, LD1 6DF, UK
Tel: +44(0)1597 824811 Fax: +44(0)1597 824812
Email: skyeemail@skyeinstruments.com Web: www.skyeinstruments.com

