




MINIMET

Thies Clima Wind Sensors

To fit these sensors to the windarm please follow these instructions

1. Feed the sensor plug through the large hole in the windarm until the sensor is almost in position.
2. Remove the three M4 screws from the adapter in the base of the sensor.
3. Put the sensor in position and fix in place by screwing the three screws through the windarm into the adapter.
4. For the windspeed sensor make sure that the sensor is sitting flat on the windarm and that the grub screws holding the sensor onto the adapter are tight.
5. For the wind direction sensor you must also make sure that the sensor is aligned in the correct direction. To do this you can align the North mark on the sensor so that it is at right angles to the windarm, and then, when the mast is in place you can rotate the mast/ windarm assembly until the windarm is correctly aligned. Note that the windarm will be aligned east west. This is done to avoid shading any light sensors that might be fitted to the system.

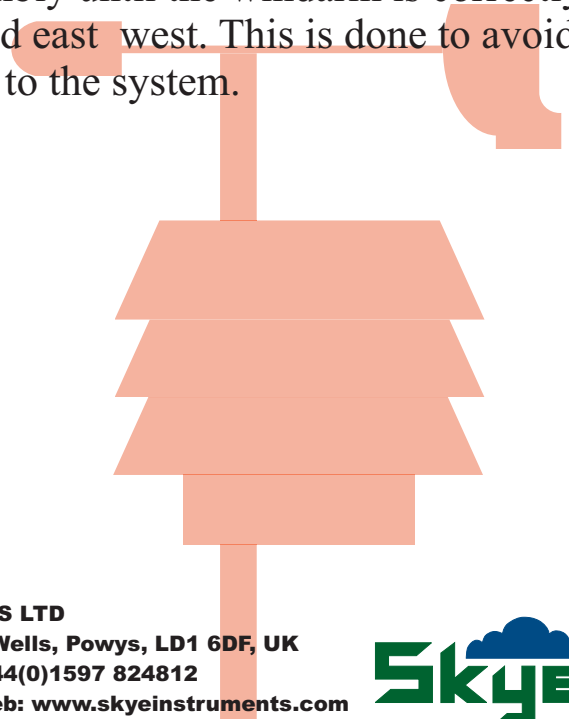

SKYE INSTRUMENTS LTD
21, Ddole Enterprise Park, Llandrindod Wells, Powys, LD1 6DF, UK
Tel: +44(0)1597 824811 Fax: +44(0)1597 824812
Email: skyemail@skyeinstruments.com Web: www.skyeinstruments.com

