


# Logging in and Viewing Server Data


Here is a brief guide for logging into your online portal for viewing your weather station data.

1. Firstly, head to [www.minimet.co.uk](http://www.minimet.co.uk) and you will see this page:

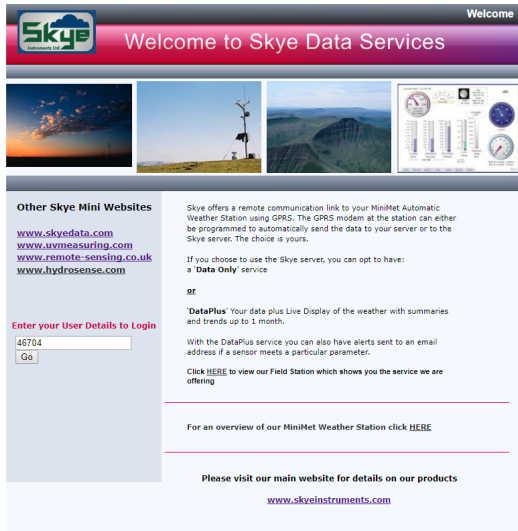

2. Next, enter your user details in the bar on the left and click 'Go'.

3. On the next screen you will be asked to Log in with your Username and Password.

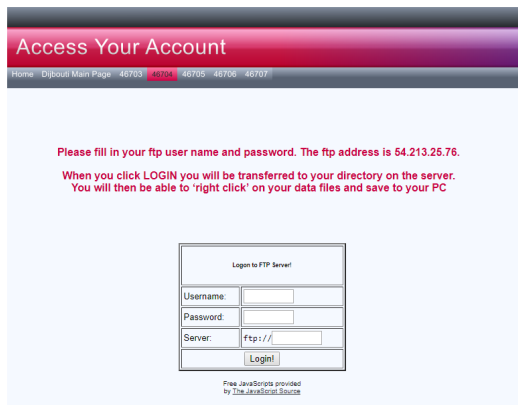

The 'Server:' ftp:// is the address is the first line of text, in this case it is **54.213.25.76**. Once you have entered your details, click 'Login!'.

4. You will now see this screen:

**Index of /**

Name	Size	Date Modified
Information/		11/27/17, 11:30:00 AM
Skyedata/		11/27/17, 11:30:00 AM

To view the data from your weather station, please click the second item, 'Skyedata/'. In this file you will find the day data files;

**Index of /Skyedata/**

[parent directory]

Name	Size	Date Modified
<input type="checkbox"/> 161215daydata.txt	87.3 kB	12/15/16, 12:00:00 AM
<input type="checkbox"/> 161216daydata.txt	159 kB	12/16/16, 12:00:00 AM
<input type="checkbox"/> 161217daydata.txt	158 kB	12/17/16, 12:00:00 AM
<input type="checkbox"/> 161218daydata.txt	159 kB	12/18/16, 12:00:00 AM
<input type="checkbox"/> 161219daydata.txt	159 kB	12/19/16, 12:00:00 AM
<input type="checkbox"/> 161220daydata.txt	159 kB	12/20/16, 12:00:00 AM
<input type="checkbox"/> 161221daydata.txt	159 kB	12/21/16, 12:00:00 AM
<input type="checkbox"/> 161222daydata.txt	159 kB	12/22/16, 12:00:00 AM
<input type="checkbox"/> 161223daydata.txt	158 kB	12/23/16, 12:00:00 AM
<input type="checkbox"/> 161224daydata.txt	159 kB	12/24/16, 12:00:00 AM
<input type="checkbox"/> 161225daydata.txt	158 kB	12/25/16, 12:00:00 AM
<input type="checkbox"/> 161226daydata.txt	158 kB	12/26/16, 12:00:00 AM
<input type="checkbox"/> 161227daydata.txt	159 kB	12/27/16, 12:00:00 AM
<input type="checkbox"/> 161228daydata.txt	159 kB	12/28/16, 12:00:00 AM
<input type="checkbox"/> 161229daydata.txt	159 kB	12/29/16, 12:00:00 AM
<input type="checkbox"/> 161230daydata.txt	158 kB	12/30/16, 12:00:00 AM
<input type="checkbox"/> 161231daydata.txt	156 kB	12/31/16, 12:00:00 AM
<input type="checkbox"/> 170101daydata.txt	152 kB	1/1/17, 12:00:00 AM
<input type="checkbox"/> 170102daydata.txt	159 kB	1/2/17, 12:00:00 AM
<input type="checkbox"/> 170103daydata.txt	159 kB	1/3/17, 12:00:00 AM
<input type="checkbox"/> 170104daydata.txt	159 kB	1/4/17, 12:00:00 AM
<input type="checkbox"/> 170105daydata.txt	158 kB	1/5/17, 12:00:00 AM
<input type="checkbox"/> 170106daydata.txt	158 kB	1/6/17, 12:00:00 AM
<input type="checkbox"/> 170107daydata.txt	159 kB	1/7/17, 12:00:00 AM
<input type="checkbox"/> 170108daydata.txt	159 kB	1/8/17, 12:00:00 AM
<input type="checkbox"/> 170109daydata.txt	159 kB	1/9/17, 12:00:00 AM
<input type="checkbox"/> 170110daydata.txt	159 kB	1/10/17, 12:00:00 AM
<input type="checkbox"/> 170111daydata.txt	59.6 kB	1/11/17, 12:00:00 AM
<input type="checkbox"/> 170112daydata.txt	86.0 kB	1/12/17, 12:00:00 AM
<input type="checkbox"/> 170113daydata.txt	157 kB	1/13/17, 12:00:00 AM
<input type="checkbox"/> 170114daydata.txt	155 kB	1/14/17, 12:00:00 AM
<input type="checkbox"/> 170115daydata.txt	159 kB	1/15/17, 12:00:00 AM
<input type="checkbox"/> 170116daydata.txt	159 kB	1/16/17, 12:00:00 AM
<input type="checkbox"/> 170117daydata.txt	158 kB	1/17/17, 12:00:00 AM
<input type="checkbox"/> 170118daydata.txt	159 kB	1/18/17, 12:00:00 AM
<input type="checkbox"/> 170119daydata.txt	159 kB	1/19/17, 12:00:00 AM
<input type="checkbox"/> 170120daydata.txt	159 kB	1/20/17, 12:00:00 AM
<input type="checkbox"/> 170121daydata.txt	159 kB	1/21/17, 12:00:00 AM
<input type="checkbox"/> 170122daydata.txt	159 kB	1/22/17, 12:00:00 AM
<input type="checkbox"/> 170123daydata.txt	159 kB	1/23/17, 12:00:00 AM

5. To use this data, please click on the day file you wish to view, this will take you to a screen similar to the following;

10:47:00	15.12.16	00	0000.00	01	000.000	02	00030	03	1013.05	04	009.625	05	029.97	06	062.947
10:48:00	15.12.16	00	0000.00	01	000.000	02	00040	03	1013.05	04	010.059	05	029.94	06	062.536
10:49:00	15.12.16	00	0000.00	01	000.000	02	00040	03	1013.05	04	010.354	05	030.01	06	060.684
10:50:00	15.12.16	00	0000.00	01	000.000	02	00040	03	1013.05	04	010.820	05	029.94	06	059.957
10:51:00	15.12.16	00	0000.00	01	000.000	02	00070	03	1013.05	04	011.550	05	029.92	06	060.221
10:52:00	15.12.16	00	0000.00	01	000.000	02	00040	03	1013.05	04	012.254	05	029.97	06	060.073
10:53:00	15.12.16	00	0000.00	01	000.000	02	00035	03	1013.05	04	013.154	05	029.96	06	061.242
10:54:00	15.12.16	00	0000.00	01	000.000	02	00030	03	1013.05	04	014.116	05	030.05	06	060.894
10:55:00	15.12.16	00	0000.00	01	000.000	02	00035	03	1013.05	04	014.984	05	029.92	06	061.073
10:56:00	15.12.16	00	0000.00	01	000.000	02	00035	03	1013.05	04	015.437	05	029.94	06	061.663
10:57:00	15.12.16	00	0000.00	01	000.000	02	00040	03	1013.05	04	015.777	05	029.94	06	061.052
10:58:00	15.12.16	00	0000.00	01	000.000	02	00030	03	1013.05	04	016.123	05	029.95	06	061.736
10:59:00	15.12.16	00	0000.00	01	000.000	02	00025	03	1013.05	04	016.532	05	030.04	06	061.242
11:00:00	15.12.16	00	0000.00	01	000.000	02	00050	03	1013.05	04	016.790	05	030.00	06	061.410
11:01:00	15.12.16	00	0000.00	01	000.000	02	00030	03	1012.76	04	016.979	05	029.93	06	062.757
11:02:00	15.12.16	00	0000.00	01	000.000	02	00055	03	1012.76	04	017.086	05	030.02	06	061.768
11:03:00	15.12.16	00	0000.00	01	000.000	02	00045	03	1012.76	04	017.308	05	030.00	06	061.831
11:04:00	15.12.16	00	0000.00	01	000.000	02	00005	03	1012.76	04	017.394	05	030.05	06	061.578
11:05:00	15.12.16	00	0000.00	01	000.000	02	00040	03	1012.76	04	017.476	05	030.13	06	061.115
11:06:00	15.12.16	00	0000.00	01	000.000	02	00030	03	1012.76	04	017.458	05	030.15	06	060.889
11:07:00	15.12.16	00	0000.00	01	000.000	02	00035	03	1012.76	04	017.432	05	030.09	06	061.368
11:08:00	15.12.16	00	0000.00	01	000.000	02	00025	03	1012.76	04	017.475	05	030.18	06	060.915
11:09:00	15.12.16	00	0000.00	01	000.000	02	00045	03	1012.76	04	017.633	05	030.21	06	061.052
11:10:00	15.12.16	00	0000.00	01	000.000	02	00020	03	1012.76	04	017.001	05	030.22	06	061.252
11:11:00	15.12.16	00	0000.00	01	000.000	02	00045	03	1012.76	04	017.935	05	030.27	06	061.305
11:12:00	15.12.16	00	0000.00	01	000.000	02	00035	03	1012.76	04	018.281	05	030.22	06	060.957
11:13:00	15.12.16	00	0000.00	01	000.000	02	00030	03	1012.76	04	018.193	05	030.26	06	060.536
11:14:00	15.12.16	00	0000.00	01	000.000	02	00045	03	1012.76	04	018.174	05	030.23	06	060.725
11:15:00	15.12.16	00	0000.00	01	000.000	02	00010	03	1012.76	04	018.124	05	030.30	06	059.652
11:16:00	15.12.16	00	0000.00	01	000.000	02	00045	03	1012.76	04	017.970	05	030.31	06	059.336
11:17:00	15.12.16	00	0000.00	01	000.000	02	00025	03	1012.76	04	018.161	05	030.40	06	059.189
11:18:00	15.12.16	00	0000.00	01	000.000	02	00025	03	1012.76	04	018.262	05	030.42	06	059.515
11:19:00	15.12.16	00	0000.00	01	000.000	02	00025	03	1012.76	04	018.138	05	030.38	06	060.210
11:20:00	15.12.16	00	0000.00	01	000.000	02	00040	03	1012.76	04	017.941	05	030.32	06	060.863
11:21:00	15.12.16	00	0000.00	01	000.000	02	00050	03	1012.48	04	018.017	05	030.28	06	061.305
11:22:00	15.12.16	00	0000.00	01	000.000	02	00050	03	1012.76	04	018.212	05	030.34	06	061.378
11:23:00	15.12.16	00	0000.00	01	000.000	02	00045	03	1012.48	04	018.375	05	030.36	06	061.126
11:24:00	15.12.16	00	0000.00	01	000.000	02	00045	03	1012.48	04	018.532	05	030.36	06	060.368
11:25:00	15.12.16	00	0000.00	01	000.000	02	00135	03	1012.48	04	018.243	05	030.23	06	061.021
11:26:00	15.12.16	00	0000.00	01	000.000	02	00035	03	1012.48	04	018.363	05	030.27	06	060.410
11:27:00	15.12.16	00	0000.00	01	000.000	02	00040	03	1012.48	04	018.256	05	030.22	06	061.252
11:28:00	15.12.16	00	0000.00	01	000.000	02	00040	03	1012.48	04	018.432	05	030.30	06	060.031
11:29:00	15.12.16	00	0000.00	01	000.000	02	00010	03	1012.48	04	018.451	05	030.30	06	060.305
11:30:00	15.12.16	00	0000.00	01	000.000	02	00040	03	1012.48	04	017.929	05	030.25	06	060.568
11:31:00	15.12.16	00	0000.00	01	000.000	02	00035	03	1012.48	04	018.086	05	030.16	06	061.642
11:32:00	15.12.16	00	0002.51	01	000.000	02	00030	03	1012.48	04	018.124	05	030.22	06	061.264
11:33:00	15.12.16	00	0001.25	01	000.000	02	00040	03	1012.48	04	015.199	05	030.18	06	061.189
11:34:00	15.12.16	00	0002.51	01	000.000	02	00030	03	1012.48	04	018.507	05	030.23	06	061.147
11:35:00	15.12.16	00	0002.72	01	000.000	02	00015	03	1012.20	04	018.067	05	030.23	06	061.326
11:36:00	15.12.16	00	0002.72	01	000.000	02	00040	03	1012.20	04	018.136	05	030.23	06	061.368
11:37:00	15.12.16	00	0000.00	01	000.000	02	00060	03	1012.20	04	018.368	05	030.11	06	062.073
11:38:00	15.12.16	00	0002.72	01	000.000	02	00060	03	1012.20	04	018.488	05	030.06	06	062.484
11:39:00	15.12.16	00	0002.72	01	000.000	02	00025	03	1012.20	04	017.973	05	030.17	06	061.421
11:40:00	15.12.16	00	0002.72	01	000.000	02	00025	03	1012.20	04	017.976	05	030.10	06	062.126
11:41:00	15.12.16	00	0002.72	01	000.000	02	00015	03	1012.20	04	017.180	05	030.03	06	061.884
11:42:00	15.12.16	00	0002.72	01	000.000	02	00040	03	1012.20	04	017.016	05	030.03	06	061.568
11:43:00	15.12.16	00	0001.25	01	000.000	02	00050	03	1012.20	04	015.400	05	030.02	06	062.442
11:44:00	15.12.16	00	0002.72	01	000.000	02	00065	03	1012.20	04	016.337	05	029.93	06	062.978
11:45:00	15.12.16	00	0002.72	01	000.000	02	00030	03	1012.20	04	016.109	05	029.97	06	061.968
11:46:00	15.12.16	00	0002.72	01	000.000	02	00025	03	1012.20	04	015.783	05	029.94	06	061.789
11:47:00	15.12.16	00	0002.72	01	000.000	02	00035	03	1011.91	04	015.211	05	029.92	06	061.526

To use this data, simply highlight all of this data (Ctrl + A) and copy. Once you have done this, paste the data into excel in 'Space Delimited' format.