

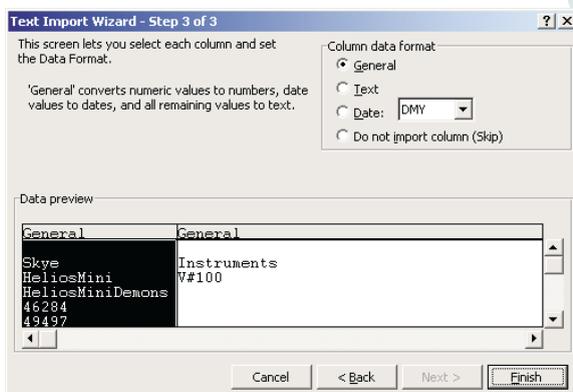


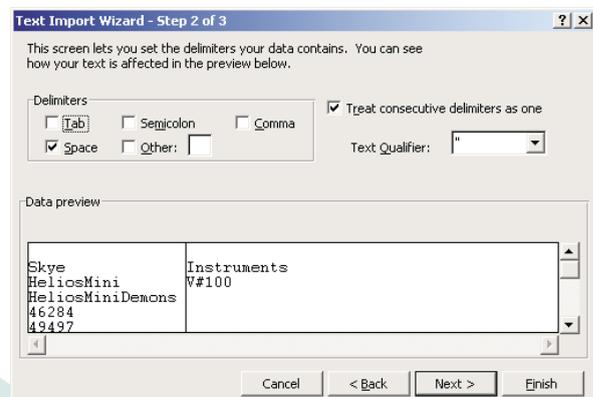

# DATALOGGERS

## Importing data into Microsoft Excel

1. Open Excel. Click File, Open and choose the file offloaded from your Skye logger.
2. Go through the Text Import Wizard steps 1 to 3.
  - Step 1 - Choose Delimited file type and click Next.
  - Step 2 - Choose the Space delimiter (not Tab) and click Next.
  - Step 3 - Click Finish

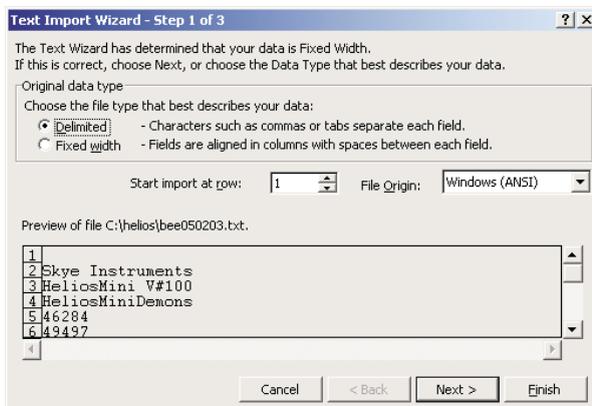

The data is now in columns in Excel  
Ready to graph etc as usual

**SKYE INSTRUMENTS LTD**  
21, Ddole Enterprise Park, Llandrindod Wells, Powys, LD1 6DF, UK  
Tel: +44(0)1597 824811 Fax: +44(0)1597 824812  
Email: [skyeemail@skyeinstruments.com](mailto:skyeemail@skyeinstruments.com) Web: [www.skyeinstruments.com](http://www.skyeinstruments.com)

