



Technical Help - Water Level Sensor


Filter Replacement in the vented cable box of an SKPS 1830 and SKPS 1730 Water level Sensor




Step 1. Lid removed




Step 2. Remove
the nut from the
gland

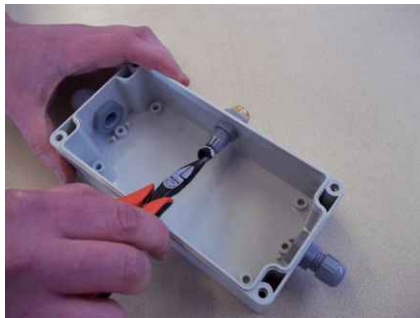


Step 3. Use pliers to
grip and remove the
rubber seal

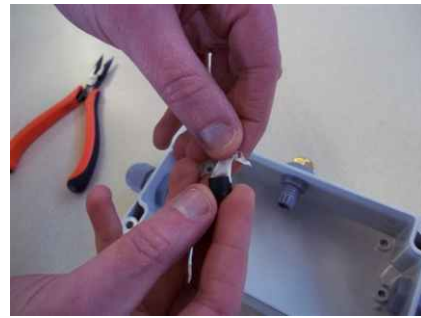

Step 4. Remove
the material
from the rubber
seal

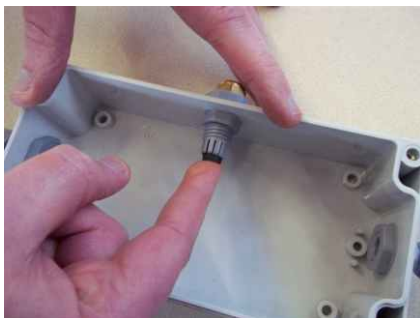


Step 5. Replace rubber
seal

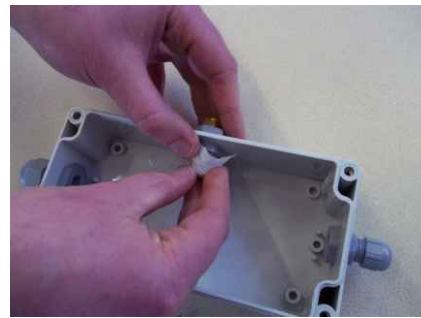

Step 6. Place
new filter
material evenly
over gland



Step 7. Place nut over
filter material and
tighten

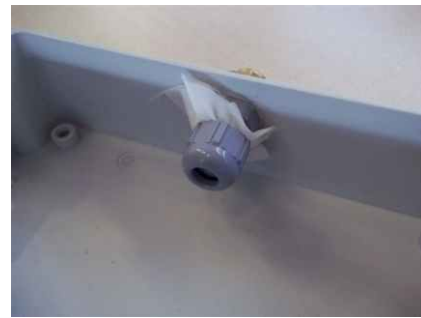

Completed

Skye Instruments Ltd

21, Ddole Enterprise Park, Llandrindod Wells
Powys LD1 6DF, United Kingdom

TEL +44 (0)1597 824811 FAX +44 (0)1597 824812

EMAIL skyeemail@skyeinstruments.com WEB <http://www.skyeinstruments.com>