



# MINIMET

## Display & Print Graphs


### DISPLAY GRAPH ON SCREEN

1. Download data from the datalogger as usual
2. Click DATA
3. Click DISPLAY GRAPH
4. Click SET GRAPH DATES / TIMES
5. Choose the date and time to graph from the START and END calendars
6. Click DONE and then click OK.
7. Choose Channel Number (sensor type) and Graph Type as required.
8. Click UPDATE

If an error message appears, please see WizzCom FAQs for hints.

### PRINT GRAPH

1. Click on the printer icon (top bar, fourth icon from the left).
2. Click the PRINT button near the centre of the Graph Control window. The graph currently being displayed will print to the device currently set as default in Windows.
3. Click OK at the bottom to exit the Graph Control window.

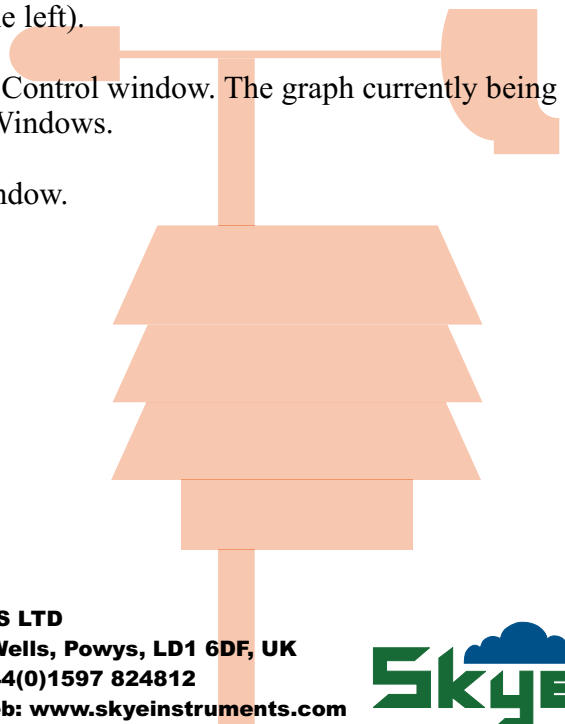

**SKYE INSTRUMENTS LTD**  
21, Ddole Enterprise Park, Llandrindod Wells, Powys, LD1 6DF, UK  
Tel: +44(0)1597 824811 Fax: +44(0)1597 824812  
Email: [skyemail@skyeinstruments.com](mailto:skyemail@skyeinstruments.com) Web: [www.skyeinstruments.com](http://www.skyeinstruments.com)

