



MINIMET


Wall mounted mast options

1) GROUND SECURED MAST

Consists of a 6m pole plus 2 small wall brackets. The top 2m of pole will easily protrude above a single storey flat topped portacabin type building.

It is advisable for the lower 0.5m of the pole to be buried in concrete, although it is possible to secure the end with a base plate and pegs into soft ground.



The 2 wall brackets each have a rectangular 'footprint' with mounting holes as below. They should be spaced 0.5 to 1 metre apart vertically.

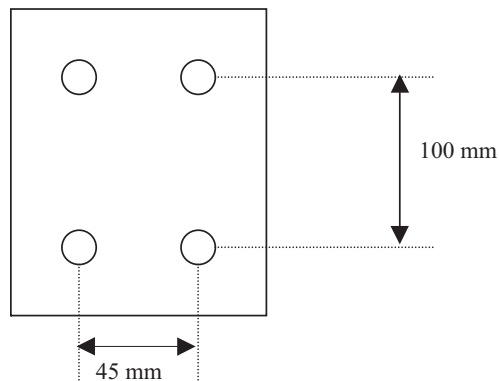

2) WALL MOUNTED MAST

Consists of a 3m pole plus 2 large T+K frame wall brackets. The lower 1m of the pole is secured by the wall bracket so that the top 2m protrudes above the roof level.

The 2 wall brackets have a T (lower bracket) and rectangular (upper bracket) 'footprint' with mounting holes as below. They should be spaced 0.5 to 1 metre apart vertically.

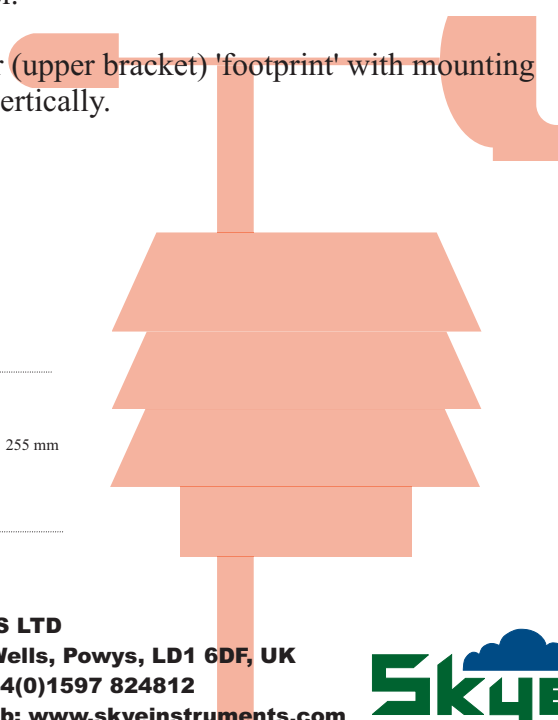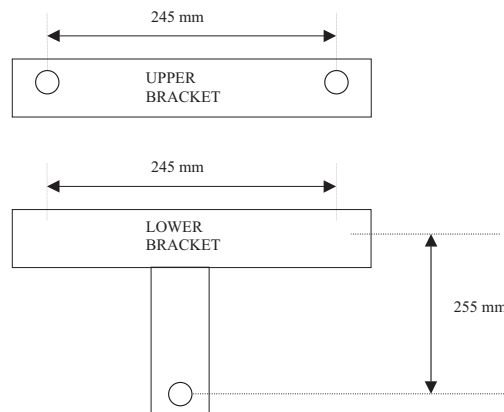

SKYE INSTRUMENTS LTD
21, Ddole Enterprise Park, Llandrindod Wells, Powys, LD1 6DF, UK
Tel: +44(0)1597 824811 Fax: +44(0)1597 824812
Email: skyeemail@skyeinstruments.com Web: www.skyeinstruments.com

